




Clear and Simple Quick Start Guide

HTC Desire® 512



Getting to know your HTC Desire® 512

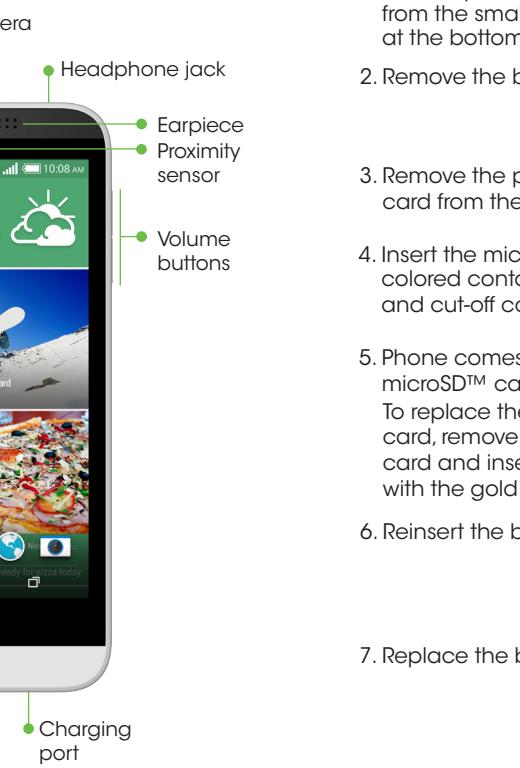

See the "Apps on Google Play" panel for more information on how files are stored on the microSD card.

Phone setup

Insert the micro SIM card



- With the phone facing down, open the back cover from the small indentation at the bottom.
- Remove the battery.
- Remove the placeholder card from the micro SIM slot.
- Insert the micro SIM with the gold colored contacts facing down and cut-off corner facing in.
- Phone comes with a 4GB microSD™ card installed. To replace the current microSD card, remove the current microSD card and insert a new microSD card with the gold contacts facing down.
- Reinsert the battery.
- Replace the back cover.



Touch screen

Customizing home screens


- From the home screen, press and hold a blank area to access customization options.
- Choose what you want to customize, such as your home screen wallpaper and widgets.

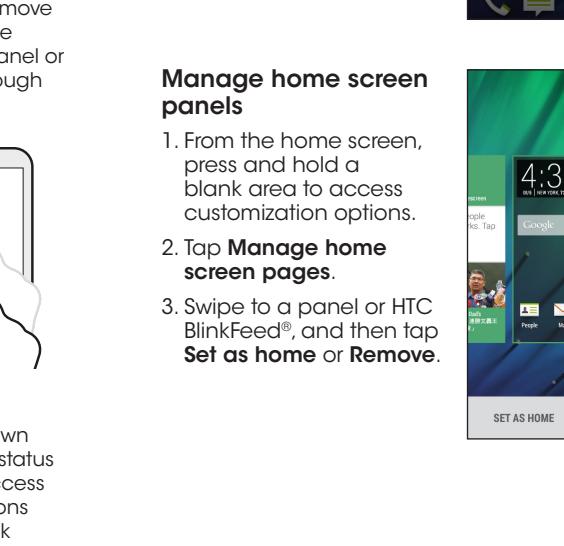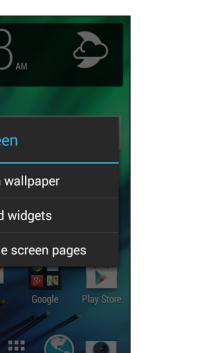

Personalize

Make a call


- From the home screen, tap **Phone**.
- Select an option to make a call:
 - Phone:** Manually enter a telephone number.
 - Call History:** Return or retry a call.
 - Favorites:** Frequent and favorite contacts.
 - People:** Call from your address book.
 - Groups:** Contacts organized by category.

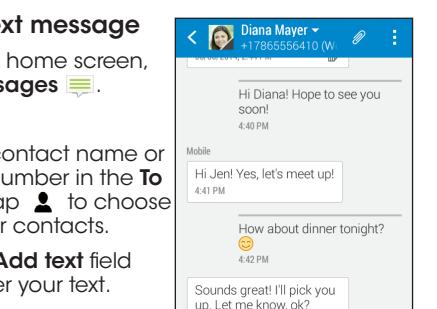

Calls and voicemail

Send a text message


- From the home screen, tap **Messages**.
- Tap **+**.
- Enter a contact name or mobile number in the **To** field or tap to choose from your contacts.
- Tap the **Add text** field and enter your text.
- Tap .

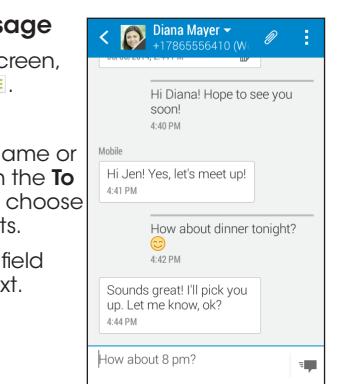

Text and picture messaging

Send a picture message

- Follow steps 1-4 above.
- Tap , and then choose an attachment type.
- Select or browse for the item to attach.
- Tap .

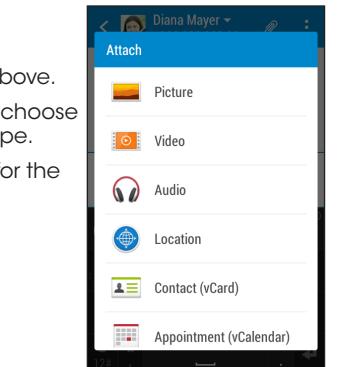

Check voicemail

- From the home screen, tap **Phone**.
- Press and hold the number **1** key on the keypad.

Please don't text and drive.

More information

On the Web

Detailed support information, tutorials, and FAQs are available at:
www.cricketwireless.com/support/devices.

On the phone

- Check out the **HTC Guide** app for self-help in troubleshooting basic problems.
- Call Customer Care at **1-855-246-2461** or dial **611** from your phone.

Accessories

Cricket offers a full line of accessories. For more information go to www.cricketwireless.com/shop/accessories or visit your local Cricket store.



Portions of this work © 2014 HTC Corporation. All rights reserved. HTC, the HTC logo, HTC Desire, HTC BlinkFeed, HTC Dot View, and Zoe are trademarks of HTC Corporation.

Portions of this work © 2014 Cricket Wireless LLC. All rights reserved. Cricket is a trademark of Cricket Wireless LLC. All other marks contained herein are property of their respective owners.


Printed in China

P/N: XXXXL000-00

Email


Email setup

- From the home screen, tap **Mail**
- Select an email provider.
- Enter the email address and password, and then tap **Next**.
- Follow the onscreen instructions, and then tap **Finish setup**.

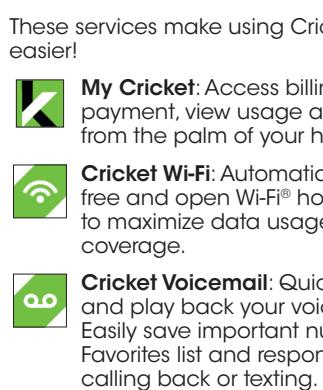

Send an email

- From the home screen, tap **Mail**
- Switch to the email account that you want to use.
- Tap **+**.
- In the **To** field, type email addresses or tap to choose from your contacts.
- Enter the subject and your message.
- To add an attachment, tap .
- Tap to send or to send it later, tap **> Save**.

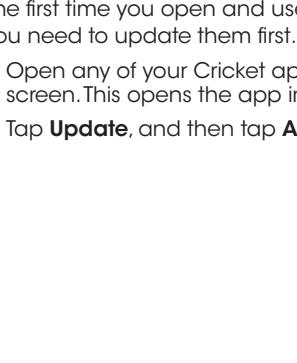

To set up your corporate email, contact your IT administrator.

Cricket services

These services make using Cricket even better and easier!

My Cricket: Access billing, make a quick payment, view usage and access support from the palm of your hand.

Cricket Wi-Fi: Automatically connect to free and open Wi-Fi® hotspots, helping you to maximize data usage and enhance coverage.

Cricket Voicemail: Quickly view, access and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back or texting.

To update and use Cricket apps

The first time you open and use your Cricket apps, you need to update them first.

- Open any of your Cricket apps from the home screen. This opens the app in Google Play.
- Tap **Update**, and then tap **Accept**.

Once installed, you will see a notification in the Notifications panel. Open the app from this notification or by locating the app in the App tray .


A Google Wallet™ payment method is required to purchase apps.

By default, some data and files may be stored on the pre-inserted microSD card. Removing this card may result in apps not working properly on your phone.

Apps on Google Play™

Access Google Play

- From the home screen, tap **Play Store**
- Enter your existing Google® Account or create one following the steps on the screen.

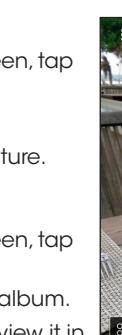

Navigate Google Play

From Play Store, you will have multiple ways to search for apps, games, and more.

- Tap a category to browse popular apps, games, movies, and music organized by popularity or category.

View pictures

- Tap a category to browse popular apps, games, movies, and music organized by popularity or category.

Take a video

- From the home screen, tap **Camera**
- Tap > **Video**.
- Tap to start recording.
- Tap to end recording.

Edit a Zoe

- From the home screen, tap
- On HTC BlinkFeed, swipe right to open the slideout menu.
- Tap > **Add content**.
- Tap a category to see available content.
- Select the feeds you want to add to HTC BlinkFeed.
- Tap **Back** key to return to HTC BlinkFeed.



Camera and video

Take a picture

- From the home screen, tap **Camera**
- Tap > **Camera**.
- Tap to take a picture.



Add feed sources in HTC BlinkFeed

- From the home screen, swipe right to access HTC BlinkFeed.
- On HTC BlinkFeed, swipe right to open the slideout menu.
- Tap a thumbnail to view it in full screen.

Create a Zoe

- From the home screen, tap
- Tap to open an album. The top tile in each album is a Zoe.
- A Zoe plays automatically on the preview screen. To view it in full screen, hold your phone in a landscape orientation.

Edit a Zoe

- From the Gallery album, tap in bottom right corner of the Zoe.
- On the Content tab, select the photos or videos you want to include in the Zoe.
- Swipe to the Themes tab to choose video filters to apply to the Zoe.
- Swipe to the Music tab to select a music file or tap **Search my library** to select music from your music library. You can then trim the song to select a particular section of the song. Tap **Done** when finished.
- To remix your Zoe, tap > **Remix**.
- To save your Zoe, tap > **Save**.
- To share your Zoe, tap .



Zoe™ Highlights

Quickly combine your photos and videos into mini movies with a soundtrack called Zoes. Relive life's important moments and share them with family and friends.

